

#### **MINOLTA RP503 ERROR CODES**

- P1** Paper empty or misfeed. All paper in the cassette has been used up or a misfeed has occurred in the paper take-up or u-turn area.
- P2** Paper empty or misfeed. A misfeed has occurred somewhere along the paper feed path.
- P3** Paper empty or misfeed. All misfeed occurred in the fusing/exit area.
- C1** Paper empty or misfeed. The mirror carriage drive mechanism is malfunctioning.
- C2** Service Representative Call. There is a charge leakage from the coronas.
- C3** Service Representative Call. The surface temperature of the fusing roller becomes excessively high (more than 200 °C).
- C4** Service Representative Call. The temperature of the fusing roller remains too low.

#### **MINOLTA RP504A ERROR CODES**

- P1** Paper empty or misfeed. All paper in the cassette has been used up or a misfeed has occurred in the paper take-up area.
- P2** Paper empty or misfeed. A misfeed has occurred somewhere along the paper feed path.
- P3** Paper empty or misfeed. A misfeed occurred in the fusing/exit area.
- C1** Paper empty or misfeed. The mirror carrier drive mechanism is malfunctioning.
- C2** Service Representative Call. There is a charge leakage from the coronas.
- C3** Service Representative Call. The surface temperature of the fusing roller becomes excessively high (more than 200 °C).
- C4** Service Representative Call. The temperature of the fusing roller remains too low.

#### **MINOLTA 605Z ERROR CODES**

- P1** Paper misfeed - Paper take-up to synchronizing rollers.
- P2** Paper misfeed - Synchronizing rollers to fusing unit.
- P3** Paper misfeed - Fusing unit to exit.
- C1** Defective mirror drive mechanism.
- C2** Defective corona unit.
- C3** An abnormally high fusing temperature.
- C4** An abnormally low fusing temperature.
- C5** Defective auto masking side shutters.

#### **MINOLTA 606Z ERROR CODES**

- P1** Paper misfeed (paper take-up to synchronizing rollers).
- P2** Paper misfeed (synchronizing rollers to fusing unit).
- P3** Paper misfeed (fusing unit to exit).
- C1** Defective mirror drive mechanism.
- C2** Defective corona unit.
- C3** An abnormally high fusing temperature.
- C4** An abnormally low fusing temperature.
- C5** Defective auto masking side shutters.
- C6** Defective projection lens identifying mechanism.
- L1** Improperly installed projection lens.

#### **MINOLTA RP607Z ERROR CODES**

- P0** A paper misfeed at the bulk paper loader.
- P1** A paper misfeed at the paper take-up section.
- P2** Paper misfeed at the paper take-up section.
- P3** A paper misfeed at the transport section.

#### **MINOLTA RP600Z ERROR CODES**

- P1** Paper empty. Paper misfeed (paper take-up).
- P2** Paper misfeed (transport fusing).
- P3** Paper misfeed (paper exit).
- E1** Defective mirror scan system.
- C1** Defective scan table sliding system.
- C3** An abnormally high fusing temperature.
- C4** An abnormally low fusing temperature.
- C5** Defective main drive motor.
- C6** Defective cooling fan motor.
- C7** Defective toner empty detection.

#### **MINOLTA RP603Z ERROR CODES**

- U7** Cover open.
- P0** Cassette not slid in position.
- P1** Paper empty - A paper misfeed at the take-up section.
- P2** A paper misfeed at the transport section.
- P3** A paper misfeed at the exit station.
- C0** Main motor malfunction.
- C1-01** Scan table drive motor malfunction.
- C1-02** Scanning motor malfunction.
- C2** Drum charge/image transfer corona malfunction.
- C3** Abnormally high fusing temperature.
- C4** Abnormally low fusing temperature.
- C5-01** Full shutter malfunction.
- C5-02** Right-side shutter malfunction.
- C5-03** Left-side shutter malfunction.
- C5-04** Centering motion failure.
- C6** Erase lamp malfunction.
- Cd** Thermistor malfunction.
- CC-01** Power unit cooling fan motor malfunction.
- CC-02** Protection lamp cooling fan motor malfunction.
- CC-03** Cooling fan motor malfunction.

#### **MINOLTA RP609Z ERROR CODES**

- P0** A paper misfeed at the paper take-up section.
- P1** A paper misfeed at the paper take-up section.
- P2** A paper misfeed at the transport section.
- P2A** A paper misfeed at the exit section.
- Pc** A card misfeed in the autocard feeder.
- PL** A blown projection lamp.
- C1** Scanning malfunction.
- C2** Improper charging.
- C3** Abnormally high fusing temperature.
- C4** Abnormally low fusing temperature.
- C5** Side shutter malfunction.
- C6** Erase lamp malfunction.
- C7** Zooming malfunction.
- C8** Mirror drive malfunction.
- Cb** Cutter malfunction.
- Cc** Serial communication error.

#### **MINOLTA DR1600 ERROR CODES**

- E-01** Film unit mounting board malfunction.
- E-02** Electrical circuit board to the inside of a copy malfunction.

#### **MINOLTA MICRO SP2000 ERROR CODES**

- L2** Projection lamp malfunction scanner.
- C1** Scan unit drive malfunction scanner.
- C2** Scan mirror drive malfunction scanner.
- C3** Shading correction malfunction scanner.

**C0** Main drive motor malfunction.  
**C1-01** Scan table drive motor malfunction.  
**C1-02** Scanning motor malfunction.  
**C2-01** Drum charge corona malfunction.  
**C2-02** Image transfer/paper separator corona malfunction.  
**C3** Abnormally high fusing temperature.  
**C4** Abnormally low fusing temperature.  
**C5-01** Full shutter malfunction.  
**C5-02** Right-side shutter malfunction.  
**C5-03** Left-side shutter malfunction.  
**C5-04** Centering motion failure.  
**C6** Erase lamp malfunction.  
**C7** Developing unit switching failure.  
**U7** Cover left open.

#### **MINOLTA MS6000 MKII ERROR CODES**

**L2** Projection lamp malfunction scanner.  
**Lb** Battery low scanner.  
**C1** Scan unit drive malfunction scanner.  
**C2** Scan mirror drive malfunction scanner.  
**C3** Shading correction malfunction scanner.  
**C4** Cooling fan motor malfunction scanner.  
**C6** Fusing malfunction printer.  
**C7** Laser diode malfunction printer.  
**C8** Polygon motor malfunction printer.  
**C9** Main motor malfunction printer.  
**CA** Cooling fan motor malfunction printer.  
**Cb** Communication error scanner or printer.  
**CC** Communication error scanner or ACF-8.  
**CE** PC interface kit board malfunction scanner.  
**CF** Firmware malfunction scanner.  
**CL** Printer clock malfunction scanner.  
**PE** Paper empty printer.  
**PO** Paper size error printer.  
**P1** Paper misfeed (paper take-up section) printer.  
**P2** Paper misfeed (paper transport section) printer.  
**P3** Paper misfeed (fusing section) printer.  
**JO** Card misfeed (fusing section) printer.  
**E1** Printer power off or cable disconnect printer.  
**E2** Top cover open printer.  
**E4** Defective toner cartridge.

#### **MINOLTA UC2 ERROR CODES**

**E-1** The fiche carrier is slid out when roll film has been or is beginning to load.  
**E-2** Film is not loaded properly.  
**E-3** The film guide is in the fiche mode (in the raised position) when in the roll mode.  
**E-4** An open reel is not mounted properly after the film has completely taken up.  
**E-5** Film not moving at speed indicated by control setting.

**C4** Cooling fan motor malfunction scanner.  
**C6** Fusing malfunction printer.  
**C7** Laser diode malfunction printer.  
**C8** Polygon motor malfunction printer.  
**C9** Main motor malfunction printer.  
**CA** Cooling fan motor malfunction printer.  
**CB** Communication error scanner or printer.  
**PE** Paper empty printer.  
**PO** Paper size error printer.  
**P1** Paper misfeed (paper take-up section) printer.  
**P2** Paper misfeed (paper transport section) printer.  
**P3** Paper misfeed (fusing section) printer.  
**E1** Printer power OFF or D54 cable disconnect printer.  
**E2** Top cover open printer C6 fusing malfunction printer.

#### **MINOLTA MS7000 MKII ERROR CODES**

**L1** Broken lens holder.  
**L2** Projection lamp malfunction.  
**C1** Scan unit drive malfunction scanner.  
**C2** Scan mirror drive malfunction.  
**C3** Condenser lens motor malfunction - shading correction malfunction scanner.  
**C4** Cooling fan motor malfunction scanner.  
**C5** AF motor malfunction.  
**C6** Fusing malfunction printer.  
**C7** Laser diode malfunction printer.  
**C8** Polygon motor malfunction printer.  
**C9** Main motor malfunction printer.  
**CA** Cooling fan motor malfunction printer.  
**Cb** Communication error scanner or printer.  
**CL** Printer clock malfunction scanner.  
**PE** Paper empty printer.  
**PO** Paper size error printer.  
**P1** Paper misfeed (paper take-up) section.  
**P2** Paper misfeed (paper transport section).  
**P3** Paper misfeed (fusing section) printer.  
**E1** Printer power OFF or cable disconnect printer.  
**E2** Top cover open printer.  
**EO1** Thermistor (TH1) does not indicate a temperature of 80°C within 22 seconds after power ON.  
**E4** Defective toner cartridge.

#### **MINOLTA 3500 ERROR CODES**

**E-1** The power to the printer is OFF or there is a problem with the connection of the interface cable to the printer. Turn ON the printer or make sure that the interface cable is securely connected.  
**E-2** The upper cover of the printer is not closed. Make sure that it is completely closed.  
**E-3\*** It is defective of the toner cartridge. Or, the toner cartridge is not installed. Install a correct toner cartridge.  
**E-4\*** The toner cartridge of a different type is set. Install a correct toner cartridge.  
**IE\*** Paper empty indicator. Lights up when the printer is not loaded with the paper size selected for use, or when either the Paper Feeding Tray or Paper Cassette has run out of paper with Auto (auto paper selection) selected.  
**PE** Paper empty indicator. Lights up when the printer is not loaded with the paper size selected for use, or when either the Paper Feeding Tray or Paper Cassette has run out of paper with Auto (auto paper selection) selected.  
**PF\*** Paper of the output bin was filled. Remove the paper from the output bin.